



## ALUMAX Premium Ready to Install Fence Panel Installation Instructions


### ALUMAX Fence Styles

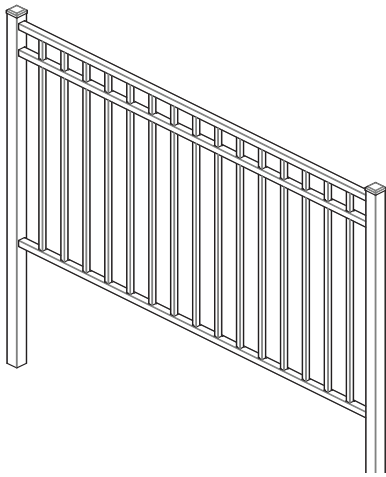

**ALC-4 ALIGNED PICKETS  
WITH FLUSH BOTTOM RAIL**  
(48", 54", 60", 72" TALL) X (72", 96")

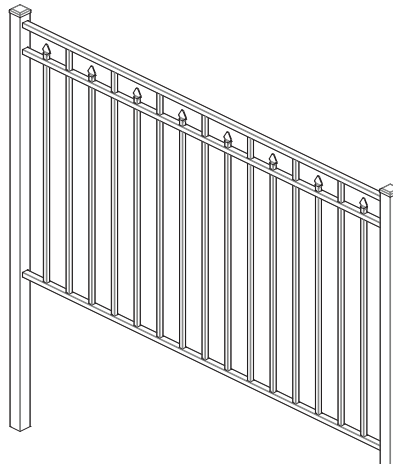

**ALC-5 STAGGERED PICKETS  
WITH FLUSH BOTTOM RAIL**  
(48", 54", 60", 72" TALL) X (72", 96")

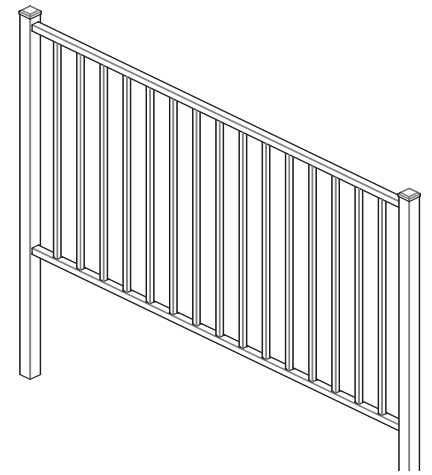

**ALC-6 TWO RAIL DESIGNS**  
(48", 60", 72" TALL) X (72", 96")

Please read instructions carefully before installing Your ALUMAX Premium Aluminum Fence.  
If you have questions or issues, please call customer service at 1-800-483-4674.

### Before You Get Started:

- It is the law to notify all local Utility Company for locates of all buried services.
- Check local zoning laws, Homeowner Associations for any height, styles, or fence location that may have to be approved before construction begins.
- Make sure where all property lines are located.


Take a few minutes to inventory all required items needed are accounted for. If any items are missing or damaged, please call customer service 1-800-483-4674.

### Tool Check List:

- |                         |                            |
|-------------------------|----------------------------|
| Post hole digger        | Safety Goggles             |
| Gloves                  | Tape measure               |
| String lines X's 2      | Rubber mallet              |
| Shovel                  | Concrete                   |
| Wheelbarrow             | Wooden Stakes              |
| Level                   | Cordless or Electric Drill |
| Framing Square          | Hacksaw                    |
| 1/8" - 3/16" Drill bits | Associated Drive Bits      |
| Pen Marker              | 1/4 x 1" Stainless Screws  |


**Note:** Fasteners / screws required for fence installation need to be purchased separately.

### 1. Review your fence layout design.

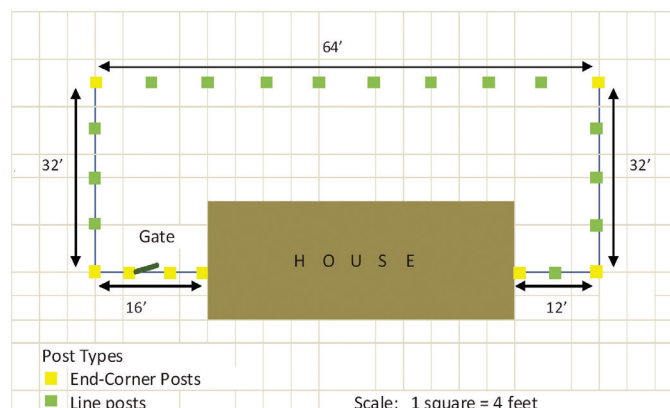


## 2. Product Overview (Fence Section)

ILLUSTRATION 2

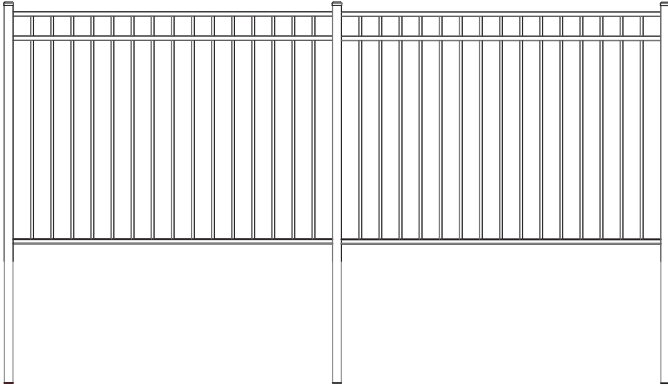


## 3. Product Overview (Post)

Illustration 3

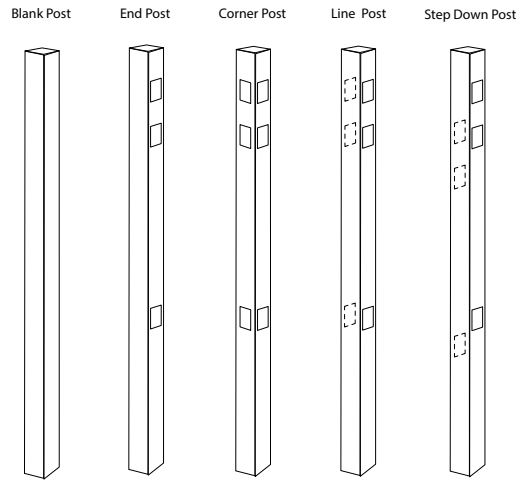

### 3a. Post Centers Spacing/Post Hole Depth Chart

Illustration 3a

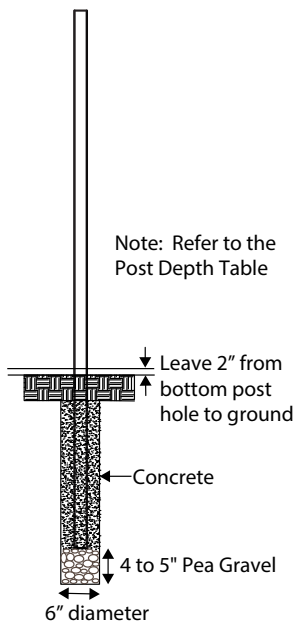

Fence Style	Fence Heights			Post Centers	
ALC-4 72	48"	54"	60"	72"	72 1/2"
ALC-4 96	48"	54"	60"	72"	96 1/2"
ALC-5 72	48"	54"	60"	72"	72 1/2"
ALC-5 96	48"	54"	60"	72"	96 1/2"
ALC-6 72	48"	n/a	60"	72"	72 1/2"
ALC-6 96	48"	n/a	60"	72"	96 1/2"
Post Hole Depth	26"	32"	26"	30"	
	Dig all post holes 6" in diameter				


### 3b. Gate Post Spacing Ledger

#### Gate Post Spacing:

Pre-assembled gate spacing for all styles of fences 48" 54" 60" 72" tall is 45 1/2" between posts.

All pre-assemble gates are 44" wide.

ILLUSTRATION 3b  
Gate Post

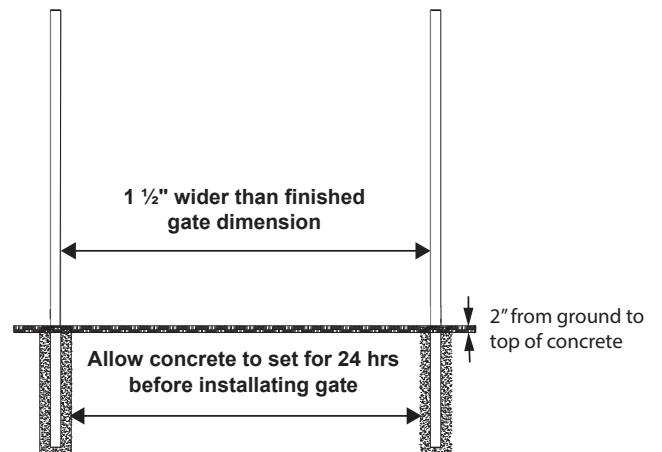

## 4. Starting Fence Layout

### BEFORE YOU START, CHECK THE FOLLOWING:

- That you meet local codes for frontage locations, property lines, fence heights and any permit requirements.
- Check with your local utility companies to locate underground pipelines, power lines or cables.
- Locate property lines.
- Drive stakes into the ground along property line. Then stretch a string between each stake and extend the string 2' beyond property line as shown below.
- Mark End-Corner post locations with a stake. For gate posts, refer to gate section for gate opening size.

Illustration 4a

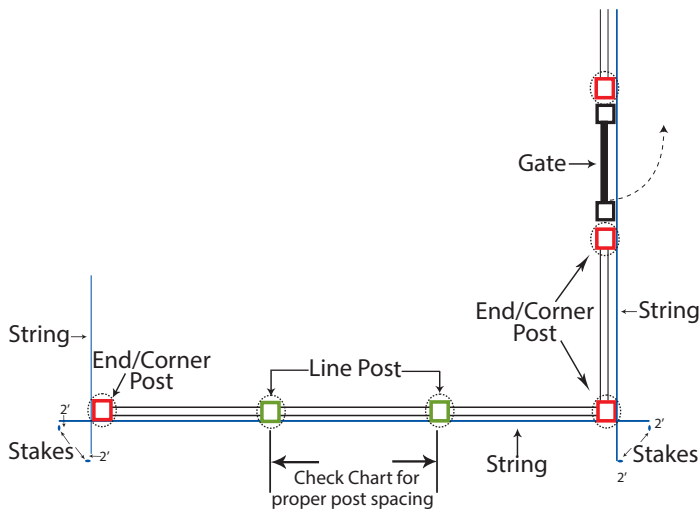


Illustration 4b

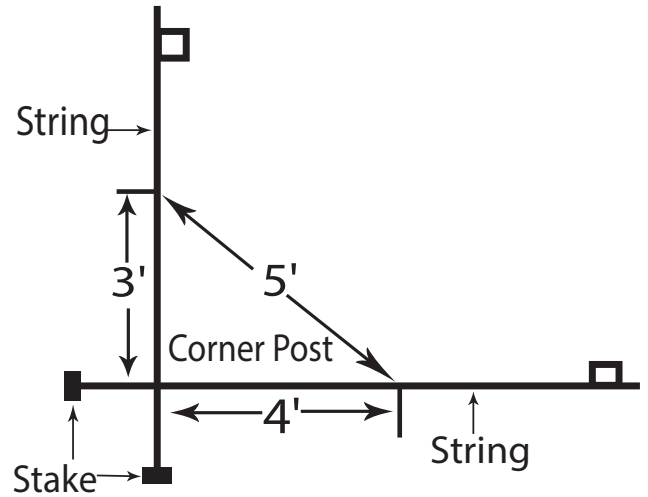


Illustration 4c


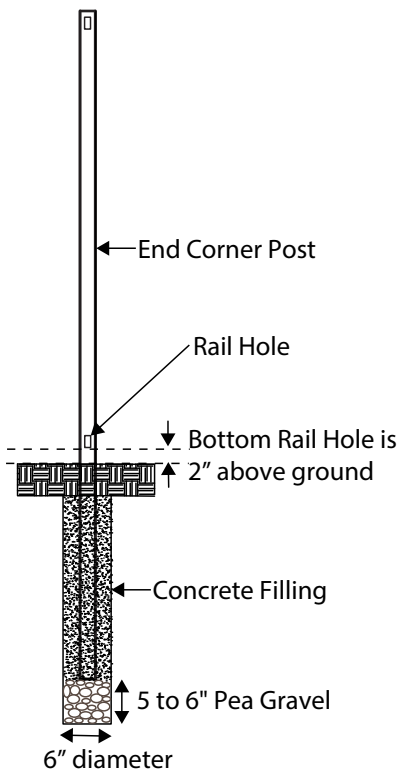


Illustration 4d

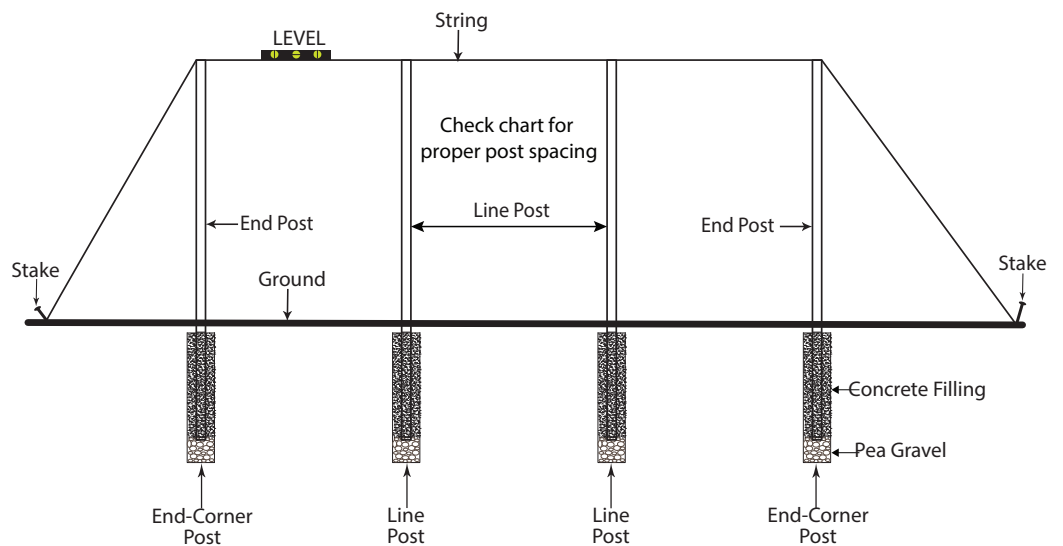

## 5. Begin Post Installation


**IMPORTANT: ONLY WORK ON ONE POST AND PANEL AT A TIME. DO NOT INSTALL ALL LINE POSTS FIRST AND THEN TRY AND FOLLOW UP WITH INSTALLING PANEL AS IT WON'T WORK!**

Using your fence layout #1 design in determine where each Corner, End posts need to be installed. Following the depth chart: in # 3a/b.

- Dig hole to proper depth.
- Pour approx. 4" to 5" of pea gravel into hole.
- Insert post into hole and tap down with rubber mallet until the space from the ground to the bottom of the bottom hole is 2"
- Mix enough concrete to fill all around the outside of the post to within approximate 2" of ground level.
- Mix concrete to have it a stiff consistency to increase set-up time.
- With a level check to make sure post is plumb
- Note: we suggest that after approximately 20/30 minutes that you double check posts to make sure they have not sunk or become out of plum.
- Install remaining posts following steps above.
- Allow Corner, end and gate posts to set for a minimum of 24 hrs.

## 6. Installing Line Posts and Panels Starting at a Corner Post

- With two (2) string lines fasten one approximately 4" above the ground around a corner or end post and attach it to the last post in the fence run.
- Attach other string line to top of the two posts.
- Refer to drawing below.

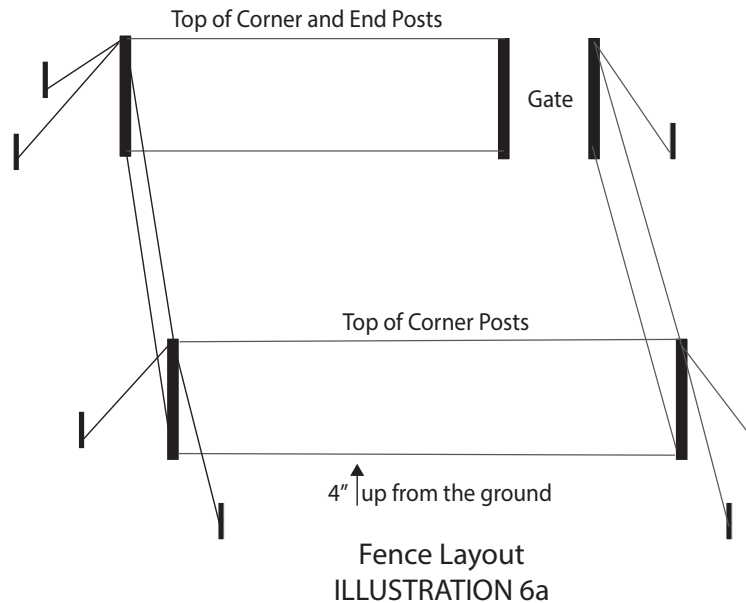

- Starting at a corner, special care needs to be taken. Each corner posts top routed hole is marked with a ("C") sticker.
- Corner panels are labeled and must be installed with notched ends inserted into the routed holes marked ("C").
- All panels must be inserted into each post a Maximum of 1"
- Before installing each panel make a mark on the top of each rail 1" from end of rail using a pen.

ILLUSTRATION 6b  
Standard Panel Rail


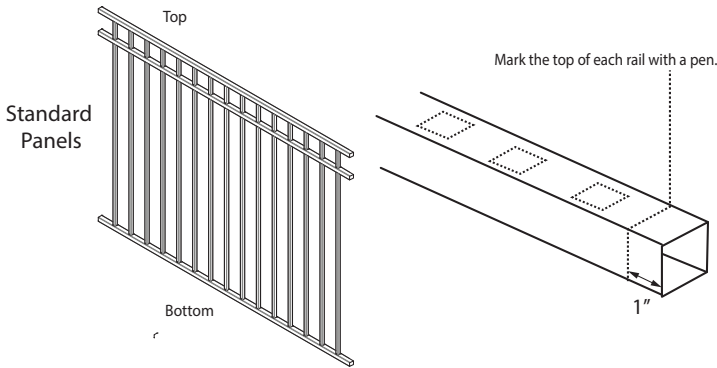


ILLUSTRATION 6c  
Corner Panel Rail

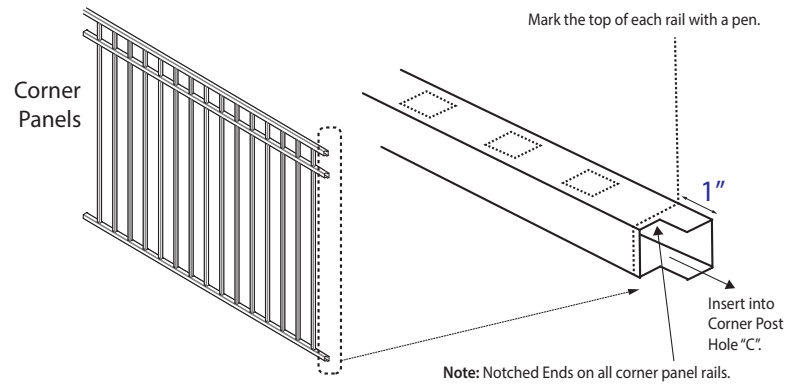

- Mark where the first line post is to be installed.
- All posts are installed with the proper spacing between each post allowing pre-assemble panels to be installed correctly.
- If your layout has corner posts, **always install your line posts and panels starting at corner post.**
- When installing corner panels ALWAYS start with CORNER PANEL FIRST INSTALLING it into corner post routed hole marked ("C") All corner panels are marked as CORNER PANELS. Secure each corner panel into posts by installing # 1/4 x 1 Black stainless-steel screws into the top of each corner post and into the outside of each rail location.

ILLUSTRATION 6d  
Top of Corner Post


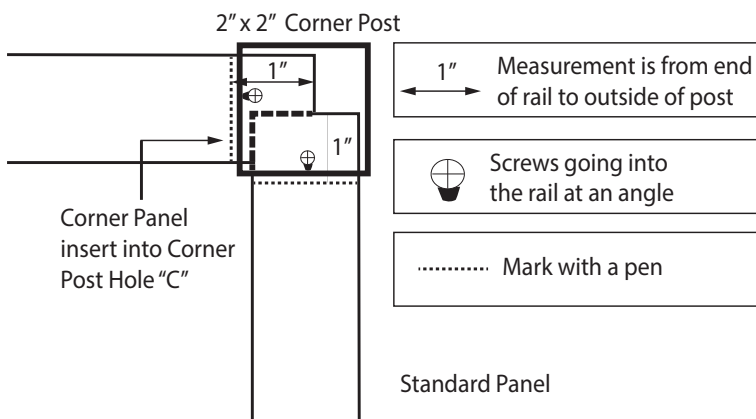


ILLUSTRATION 6e  
Mid Rail or Bottom of Corner Post

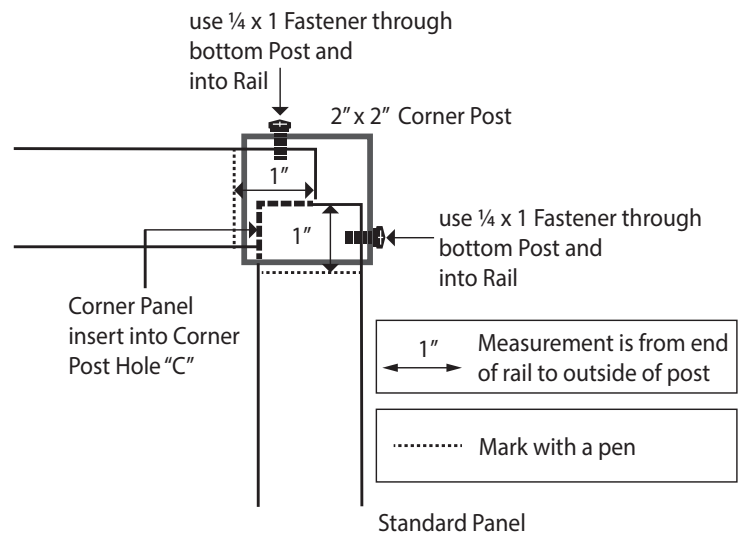

## 7. Installing Line Posts and Panels Starting at End Post

- Fence runs with only end posts line posts and panels can be installed beginning with a post closest to any end post.
- The line post and panel is now ready to install. Follow the same installation procedure as outlined in STEP 5.
- The line post top should be at the same height as top string line and outside of post should be against the bottom string line.
- Every 30/40 minutes to go back on the posts that are concreted in place to make sure they have not sunk or become out of plumb.
- Repeat this procedure until all line posts and panels are installed.

Secure each panel into each post by installing stainless steel screws # ¼ x 1 into the top of each post. It is not necessary to install screws into the bottom rails. This is an option for each installation.

ILLUSTRATION 7a  
Alumax Line Post Installation


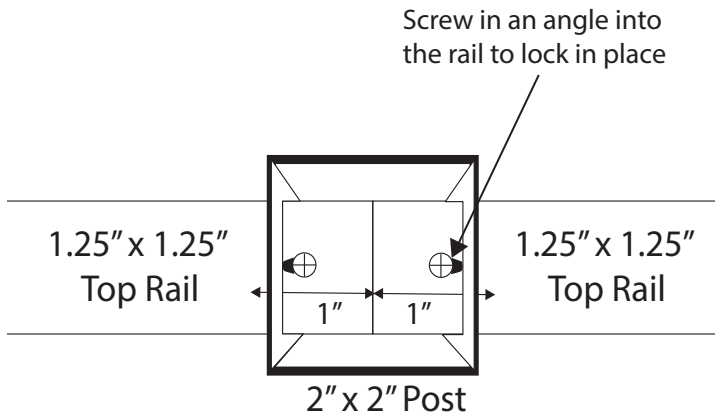



ILLUSTRATION 7b  
Alumax End Post Installation

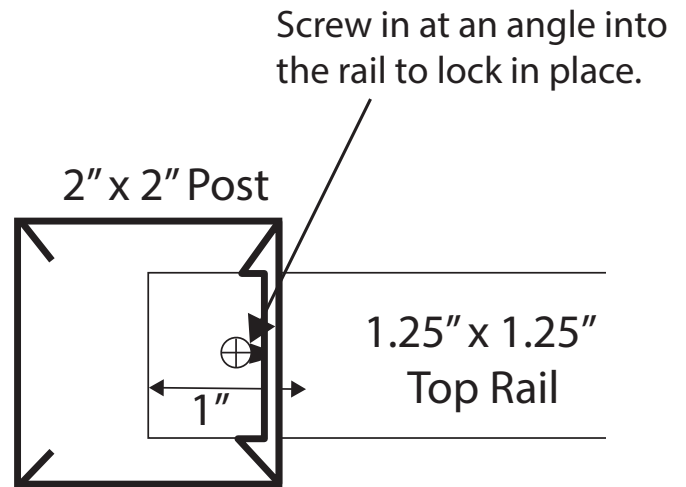

## 8. Installing Post Caps

With a rubber mallet lightly tap post caps onto each post.

ILLUSTRATION 8  
Alumax Post Cap Installation

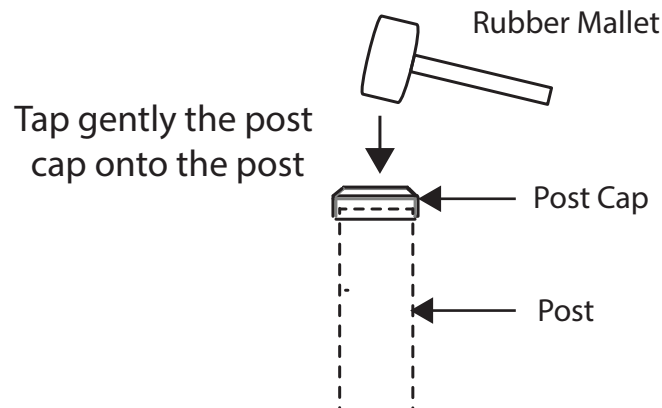


## 9. Installation of Alumax Gates:

**Note:** All fasteners required to build gates are provided in Alumax Gate Kits

- All pre-assembled gates have a finished width of 44".
- Determine which way gate is to swing.
- Lay the gate down on a flat and level surface.
- Protect the finish of the gate with cardboard or tarp.
- Install hinges to the gate at height that is not in line with any of the horizontal rails.
- Pre-drill all hinge holes in gate upright where they will be attached.
- Using screws (fasteners) provided, use a drill or screwdriver to tighten all fasteners.
- With two wooden blocks to rest the bottom of the gate on, place the gate into the entrance opening making sure that the gate top rail is even with panel top rails.
- Securely fasten gate to gate post.
- Remove wooden support blocks.
- Determine where latch is to be positioned and secure latch to gate.
- Install latch striker onto gate post.
- Install post caps.


### ILLUSTRATION 9a Alumax Gate Hardware

Gate Hardware needs to be ordered separately

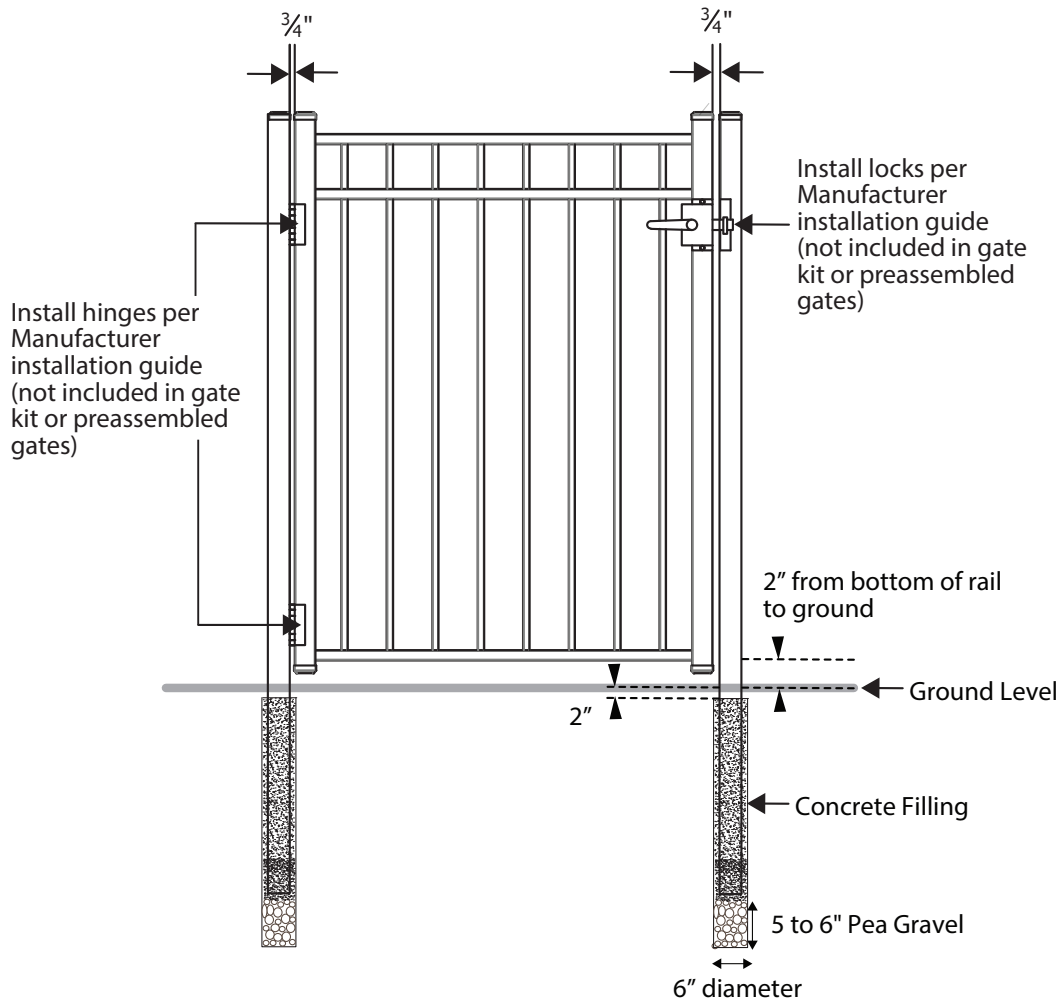


For installing gates using Alumax Gate Kits, follow the how to build instructions in pre-packaged gate kits. Completed gates built with DuraMax Gate Kits install the same as preassembled gates above (Step 8)

### ILLUSTRATION 9b Alumax Custom Gate Width

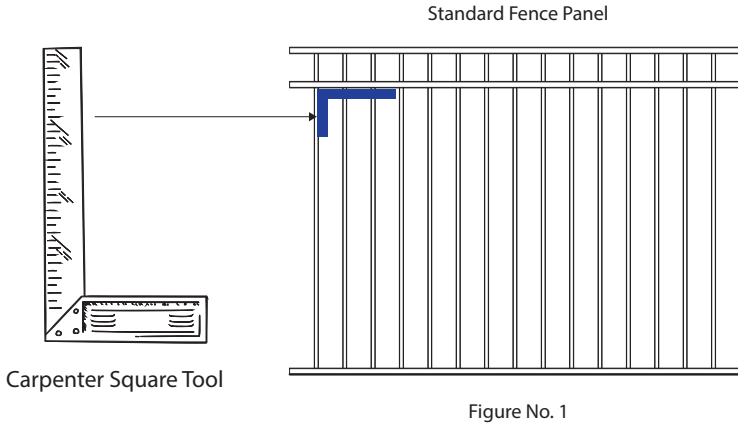

### ILLUSTRATION 9d Alumax Gate Post Installation

Internal post corner support

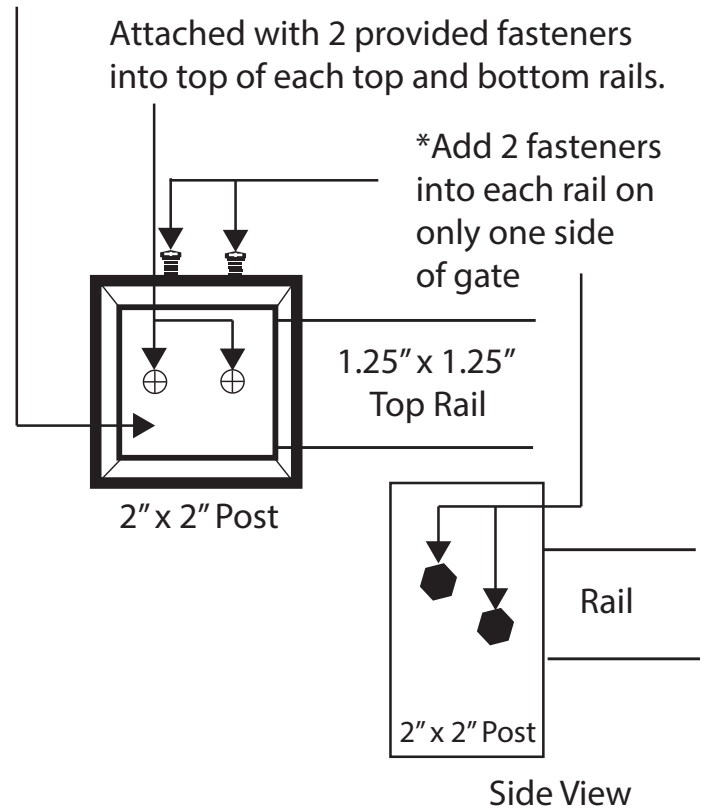

### ILLUSTRATION 9c Alumax Custom Gate Width

