

# Kennel

OWNER'S MANUAL /
Instructions for Assembly
Size 3 Ft x 3.6 Ft / 0.9 Mtr. x 1.1 Mtr.





## **Your Total Solution To Maintenance Free Kennel**

- All Weather Durable PVC
- · Won't Dent, Rust, Rot or Mildew
- Never Needs Painting
- Easy Assembly

Building Dimensions:											
Approximate	Storage		Exterior Dimension					Interior Dimension			
Size			Base Dimension			Roof Edge to Edge		Wall to Wall		Door Opening	
3 Ft x 3.6 Ft	8 Sq. Ft	21 Cu.Ft		inch	cm	inch	cm	inch	cm	inch	cm
			Width	35 1/2	90.2	32 3/8	82.3	30 1/8	76.4	15	38
0.9 m x 1.1 m	0.7 Sq.m	0.6 Cu.m	Depth	43 1/2	110.4	40 3/4	103.5	38 1/8	96.6		
			Height			46 1/4	117.3	31 3/4	80.5	28 1/4	71.8

#### **Duramax Vinvl Garden Kennel**

Limited Five Year Warranty

Interplast Co. Ltd. will send a replacement part free of charge, in the event of material defects and or workmanship for a period of Five years from the date of purchase. In the event of a defect covered by the warranty, Interplast Co. Ltd shall replace the defective part, but shall not be responsible for shipping, labor, or other charges.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of date of original purchase will be required before warranty service is rendered. In no event shall we pay the cost of flooring, labor, installation or any other costs related thereto.

This warranty only covers failures due to defects in material or workmanship which occurs during normal use and does not extend to color change arising due to normal weathering or to damage resulting from misuse or neglect, commercial use, failure to follow assembly instructions and the owner's manual (including proper anchoring of the kennel), painting, forces of nature and other causes which is beyond our control.

Claims under this warranty must be made within the warranty period by mail in a dated sales slip and clear photograph of the part to: Interplast Co. Ltd, P.O Box 4679, Sharjah, UAE.

We reserve the right to discontinue or change components. If a component has been discontinued or is not available, Interplast Co. Ltd. reserves the right to substitute a component of equal quality as may be compatible.

#### Limits and Exclusions

There are no express warranties except as listed above. The warrantor shall not be liable for incidental or consequential damages resulting from the use of this product, or arising out of any breach of this warranty. All express warranties are limited to the warranty period set forth above. Some states do not allow the exclusion or limitation on how long an implied warranty lasts, so the above limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or country to country.

 
#### **SAFETY & PRECAUTIONS**

 
For your own safety, please read and follow these instructions during the kennel assembly.

# Before You Begin...

- 1. Read and understand the Owner's manual enclosed in the package.
- 2. Follow the steps given in the manual carefully for correct assembly.
- 3. Make sure all parts are present before you start assembling.
- 4. BE SAFE: Follow safety instructions and avoid injury. (See inside page).
- 5. GROUND MUST BE EVEN: Make sure the foundation frame lies flat on the ground. If the earth bed is uneven, remove sod and other debris and level it with a flat shoval.
- 6. Separate contents of the carton by the part number and review the list. Be sure you have all the necessary parts for your kennel. Refer to Owner's manual for part list.

# Safety First!

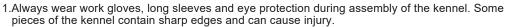

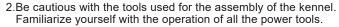

3. Children and pets should be kept away from the assembly site to avoid any distractions and accidents.

Sharp

# **Important**

Wear eye protection when using any form of power tools. Do not use voltage power tools in a wet or damp environment to avoid electric shock.



The kennel must be constructed on a solid base foundation. A concrete pad or large size concrete patio stone squares is recommended for suitable floor base. Make sure it is firm and level and will allow drainage away from the site. The base foundation should be at least 4 inches (100mm) larger than the kennel dimensions. Please refer to the front page of your owner's manual for the exterior dimensions of the kennel. Manufacturer is not responsible for the choice and construction of the foundation.

For a concrete pad base, prepare a level bed for a firm footing layer of crukennel stone. The concrete pad should then be poured to a thickness of 4 inches (100mm) to 5 inches (125mm). Allow to dry thoroughly for at least 48 hours.



Your kennel must be firmly anchored to the concrete pad or large concrete patio stone squares, to help protect against damage in high winds.

#### **Care & Maintenance**

Although this unit does not require any maintenance, care should be taken to prolong the life of your kennel.It is for one time assembling and set up, no purpose of re-using.

ROOF: Keep roof clean of leaves and snow with long handled, soft bristled broom. Heavy amounts of snow on the roof can damage the kennel making it unsafe.

**WALLS**: Do not rest any object against the wall panels of the kennel.



DO NOT store Inflammable, Hazardous and Swimming pool chemicals in your building. Combustibles and corrosives must be stored in air tight containers. Enforce NO SMOKING.





 
### Note:-



Before starting installation, please refer to Safety & Precautions.

# **Tools You Will Needed**

Cordless Drill - Philips Head Hammer or Rubber mallet Tape Measure Hand Gloves

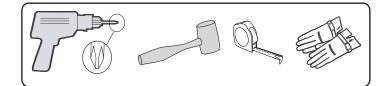


# **Part List**

Check all parts prior to installation.


PROFILES	CODE	QTY	PROFILES	CODE	QTY	ACCESSORIES		
	KE1	2		CKE1	2	PROFILES	CODE	QTY
	1/50			OVE			PPG	16
	KE2	1		CKE2	2		PIN	16
	KE3	2		KEW1	2		I IIV	10
	KE4	2		112441			BPS	10
	KE5	1		KEW2	1		BP3	10
					S1	8		
	KE6	2		KEW3	1		S2	4
					·		S7	18
				KEW4	1		<b>S</b> 5	10
				KEW5	1	- June	F1	4
				KEW6	1	0	S6	4


Please thoroughly read the owner's manual before beginning the kennel assembly.

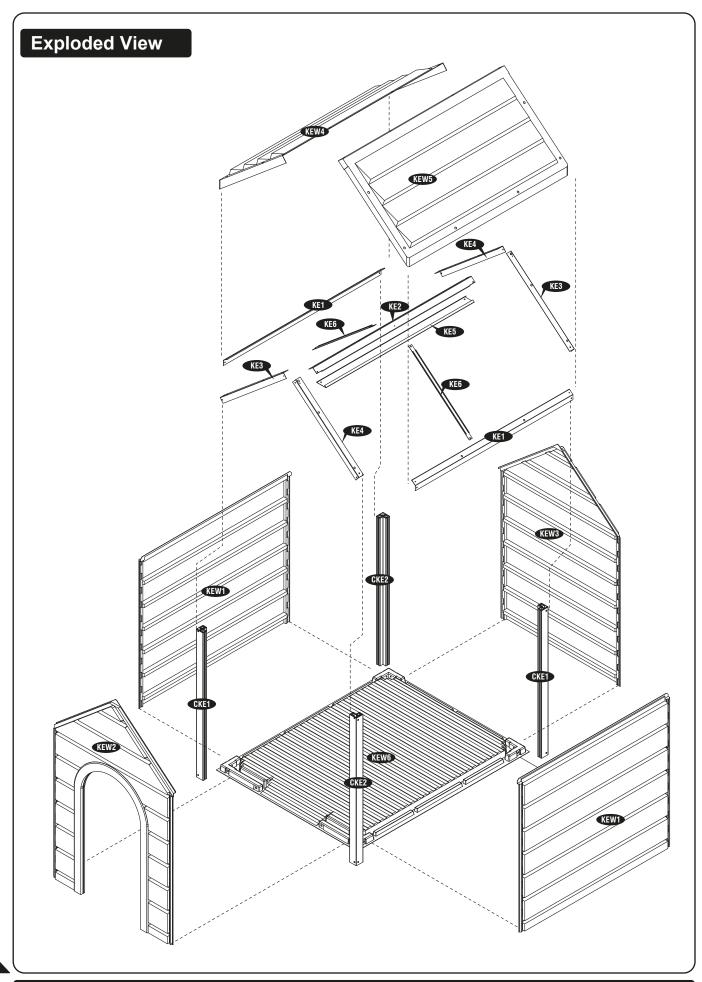






DuraMax kennels are best installed on a raised level ground or a concrete foundation. If the kennel is installed at ground level, ensure that there is proper water drainage sloping away from the kennel so rain water does not pool and get inside the kennel. For heavy rain areas, place the kennel on a raised foundation which will have minimum outside dimensions of 39 3/8" x 47 1/4" (1000mm x 1200mm).

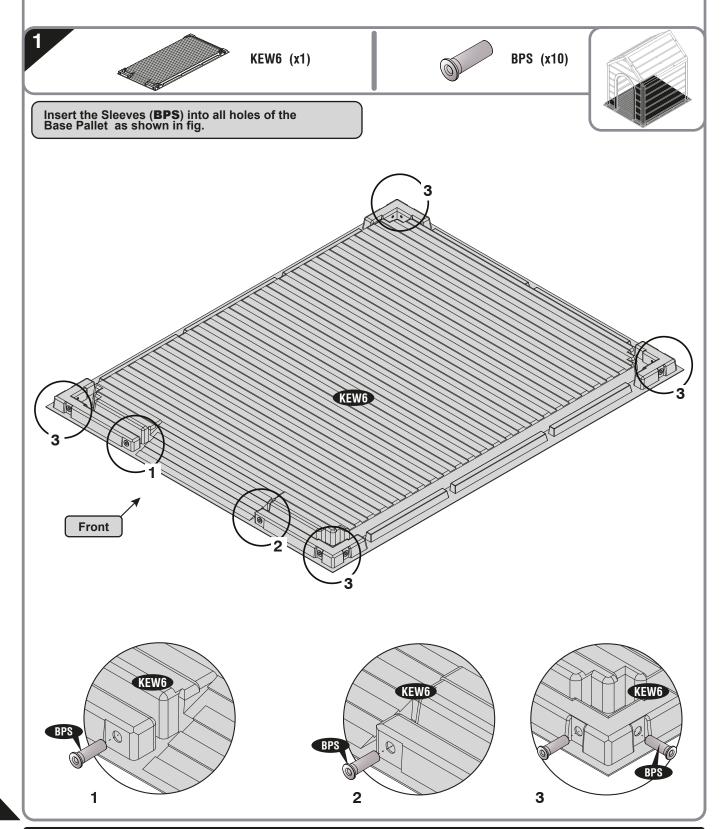


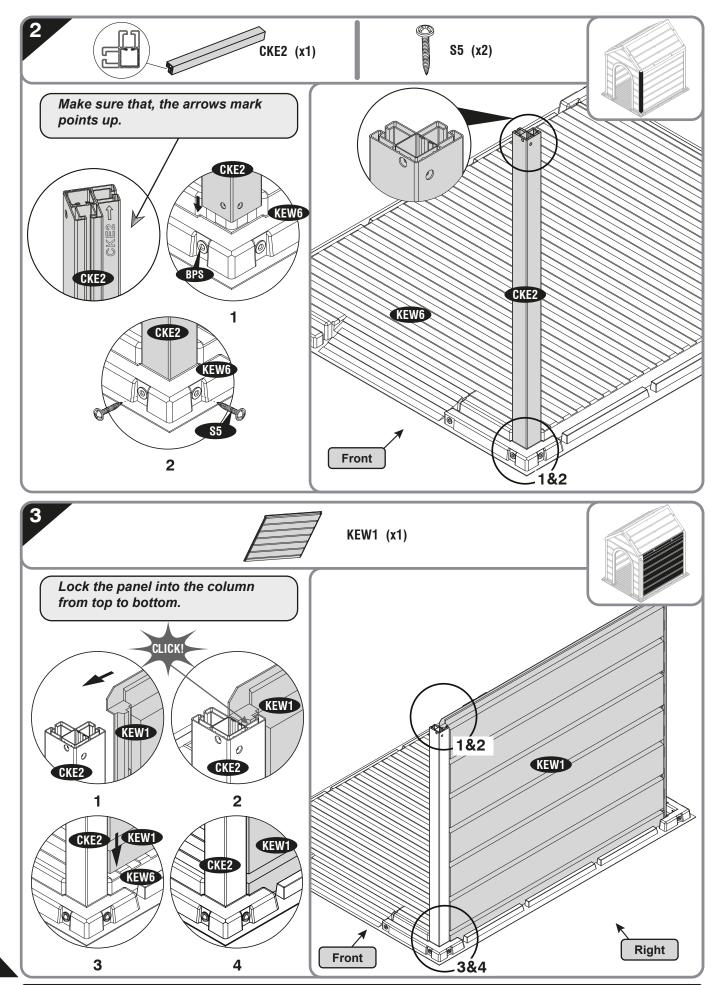


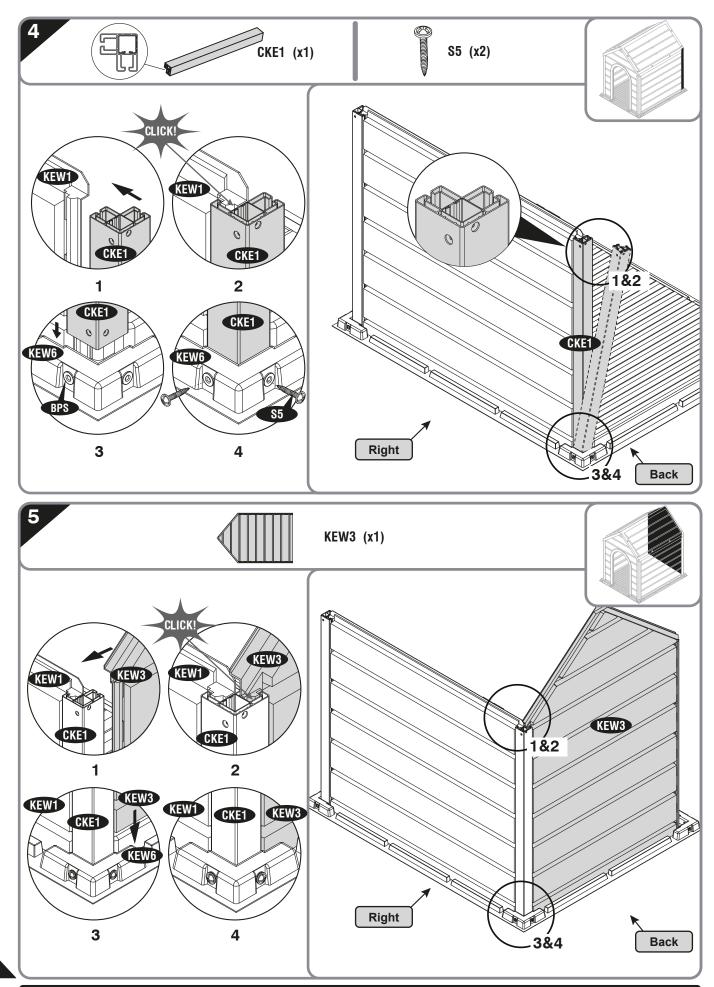


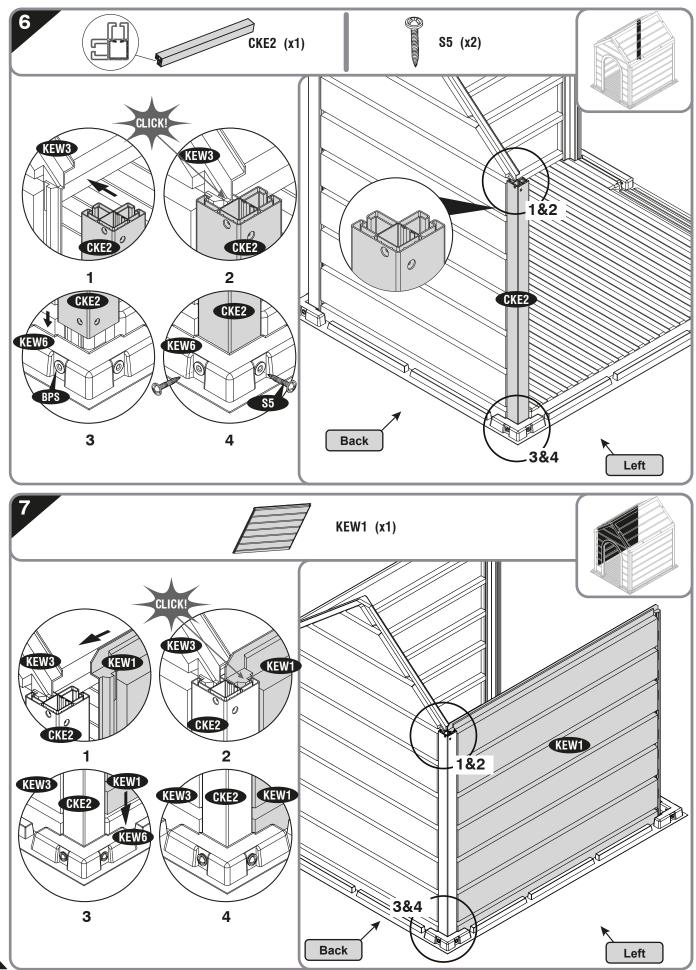


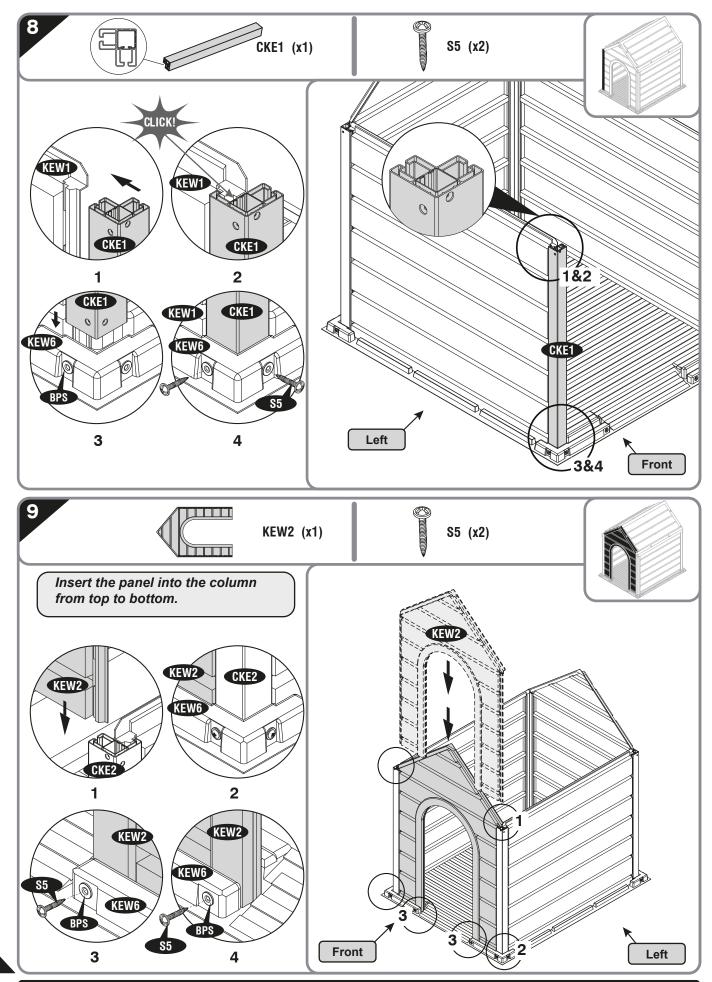

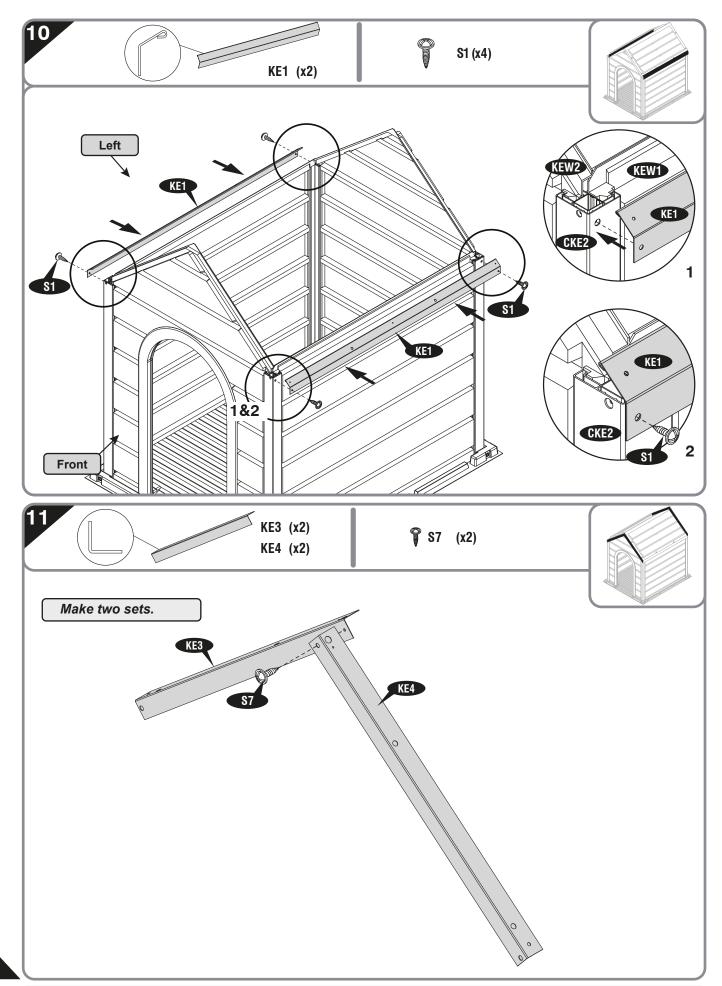

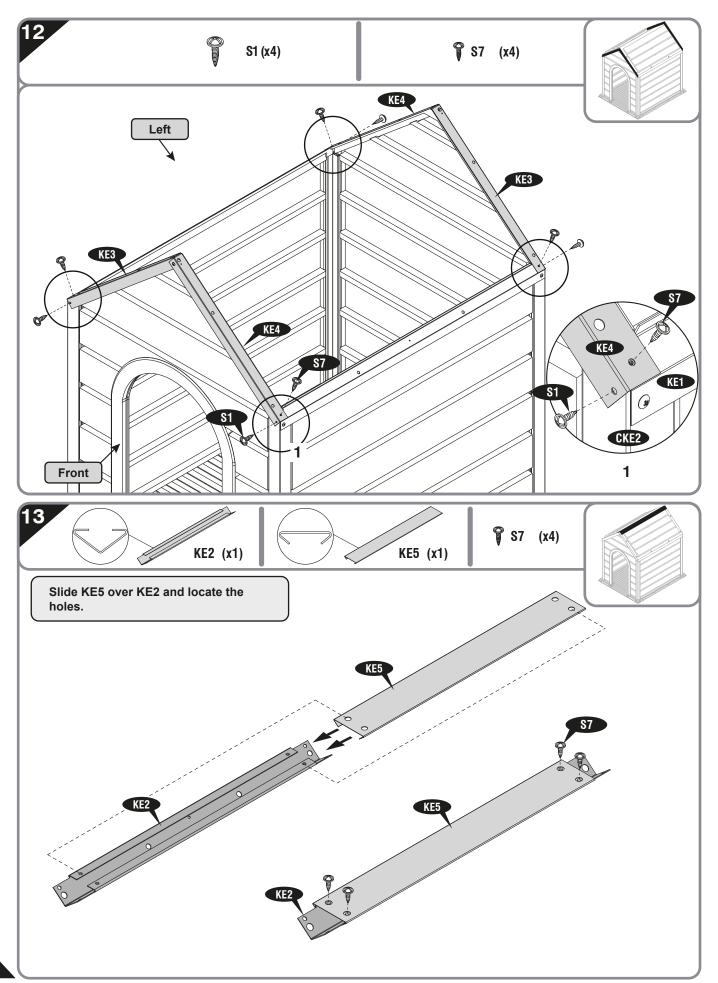

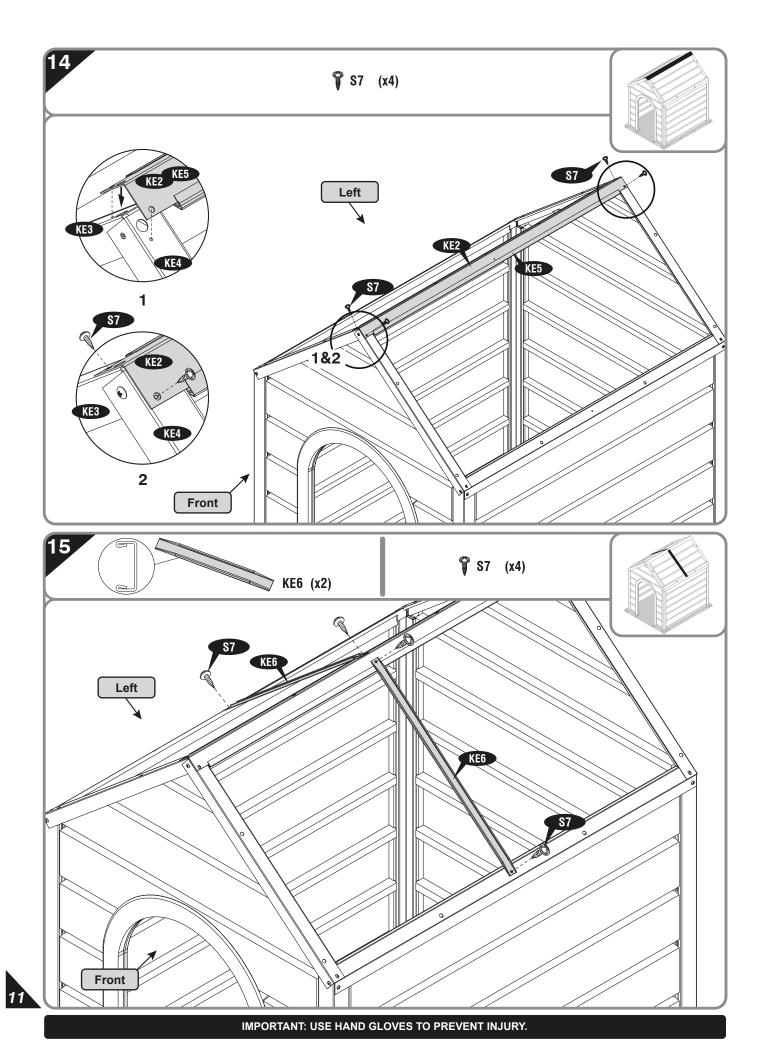

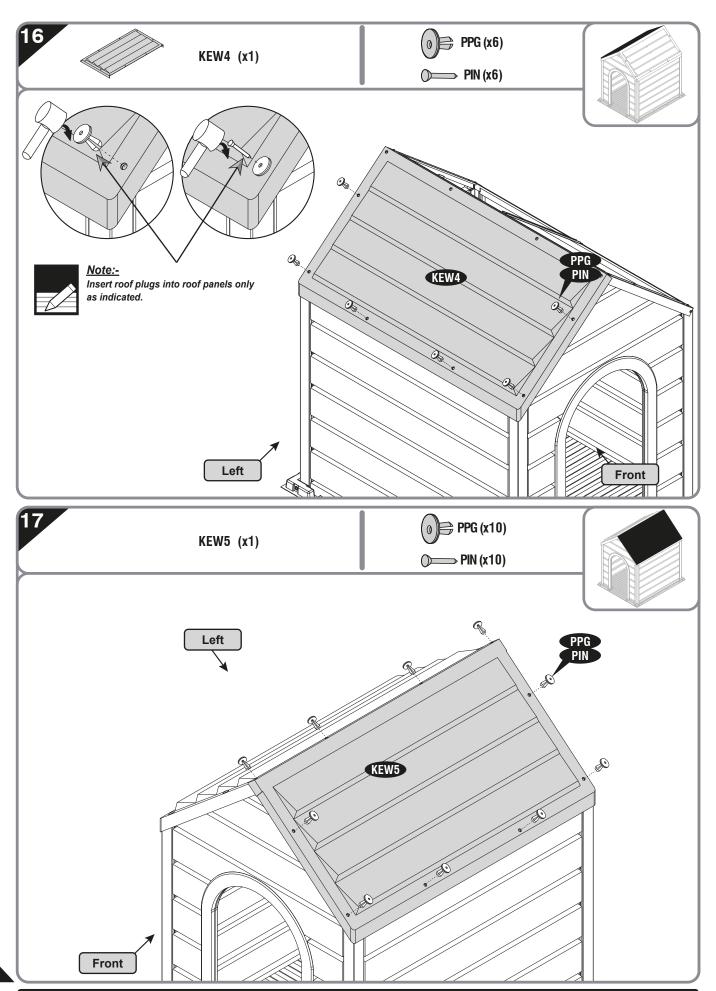

# **Kennel Assembly on Concrete Foundation**

#### Parts needed

CODE	QTY			
S2	4			
S6	4			
F1	4			

#### Note:-

To ensure that your kennel will withstand high winds, you need to anchor on the concrete foundation. A concrete pad or large size concrete patio stone squares is recommended for suitable floor base. Make sure it is firm and level and will allow drainage away from the site. Make a level concrete foundation, that has an outside of 39 3/8" x 47 1/4" (1000mm x 1200mm).

For a concrete pad base, prepare a level bed for a firm footing layer of crukennel stone. The concrete pad should be then poured to a thickness of 4 inches (100mm) to 5 inches (125mm). Allow to dry thoroughly for at least 48 hours. Manufacturer is not responsible for the choice and construction of the foundation.

Align the kennel, make dia. 5.0mm holes on the base then mark the concrete through holes on the base and drill concrete with suitable concrete bit to accept Dia 6mm wall plug

