



F. Ventilation Kit

Parts Needed:

Code	Qty
VC	2
VCP	4

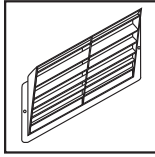

VC

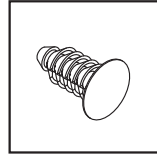

VCP

TOOLS YOU WILL NEED

Power Drill
 Dia 3/16" (5mm) drill bit
 Dia 1/2" (12.5mm) drill bit

Note



Optional ventilation kits can be installed on any of the wall panels. However, we recommend mounting them on the top of the shed's back wall.

